


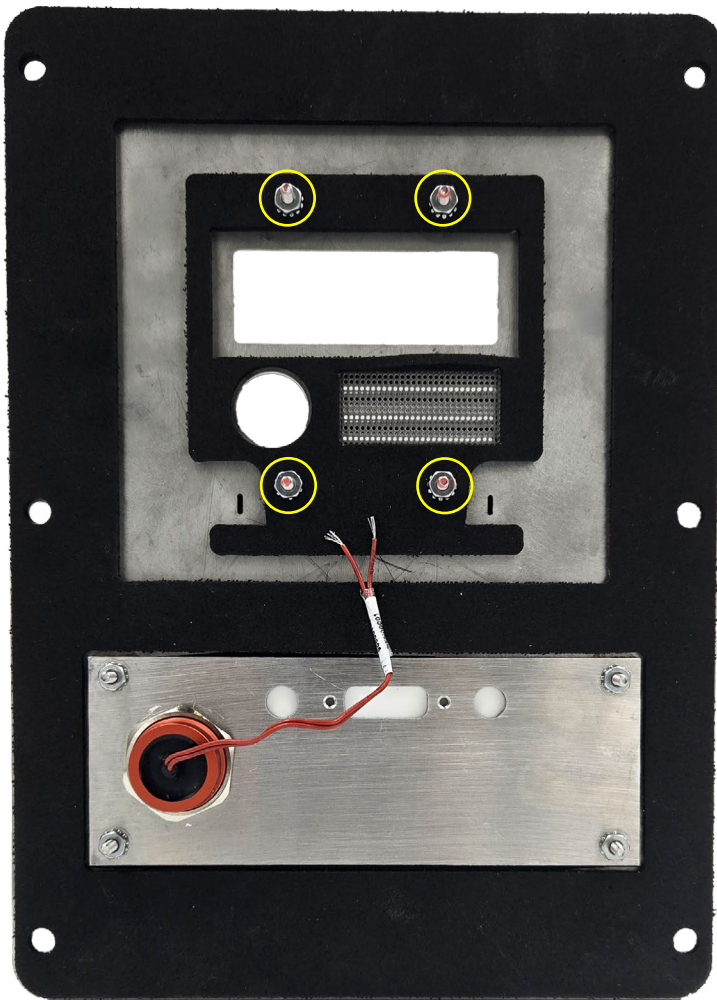

Axis Intercom Assembly to Faceplate

1. Remove the 4 hex nuts that will secure the Axis Intercom to the faceplate.
2. Place the intercom over the 4 posts and reinstall the nuts to hold it in place.
3. Using a 5/16" deep-well socket (or similar), tighten the nuts just enough to keep the intercom from moving.
4. Flip the faceplate over and center the intercom button in the faceplate hole.
5. Fully tighten the 4 nuts until the gasket under the intercom is completely compressed.
6. Make sure the button remains centered in the hole. Adjust if necessary.





To connect the auxiliary button:

1. If not already done, cut off the connector and strip the wire ends to 0.150".
2. Insert the wires into I/O connector pins 1 and 3 (- and I/O 1) and tighten the screws.

To connect the intercom:

- Connect a network cable to the unit and follow the intercom's setup instructions.

If connecting a strobe light:

- Connect the yellow wires to the COM and NO/NC terminals.

